



## Instructions for the operation of the digital game timer GARDÉ start

1. *Features:*
- positive timing and presetable countdown timer, maximum 10 hours
  - bonus and delay up to 59 seconds
  - same or different time per player
  - settable alarm when the match is over <sup>(0=off, 1=on)</sup>
  - power supply: 1x AA battery (1.5V)

2. *Clockparts:*
- ① < left/right >
  - ② < + >
  - ③ < start/pause/setting > (▶||/🕒)
  - ④ < - >
  - ⑤ < ON/OFF >
  - ⑥ screens
  - ⑦ battery cover

### 3. Operating Instructions

3.1 *ON / OFF* Turn the clock on by inserting the battery and switching the < **ON/OFF** > button to "ON"; switching the < **ON/OFF** > to "OFF" the clock is turned off.

3.2 *Positive timing* When turned on, the screen displays "0:00 00", it is a positive timing. [\*] Adjust the < **left/right** > rocker switch so the side supposed to start corresponds to the upper side. Press < ▶||/🕒 > briefly to start. Factory setting is no increment and the beeper turned off.

#### 3.3 *Countdown timing a. same time for both players*

In the positive timing screen, press < ▶||/🕒 > for 2 sec to enter the countdown setting state. The "hour" digit on the left starts to flash, press < + > or < - > to move up or down in steps of 1 until reaching the time required. Press < ▶||/🕒 > briefly in order to switch to the minutes, then seconds. When going to the right side the time from the left is copied automatically. After moving through the right side you get to increment (first bonus, then delay) and finally the beeper. Another 2 second long pressing of < ▶||/🕒 > ends the setting mode. Now start the clock as 3.2 [\*].

#### b. different times for the players

Same procedure as a. with the only difference that now you change the time on the right. The setting is carried out as in a., game started as [\*].

3.3 *Pause* While running, briefly press < ▶||/🕒 >, press it again to continue.

3.4 *Restart* Turning the clock off and on again with the < **ON/OFF** > button sets the clock back to the last time set. In order to get back to the factory setting briefly take out the battery.

*Note:* When the display is dim and pressing < **left/right** > does not work, the battery needs to be changed as soon as possible.

### 4 Maintenance

Keep away from hot sun or high temperature to avoid the displays turning black. Keep away from corrosive liquids and sharp hard object impacts. Keep away from high static objects, such as screens etc. When not using the clock for a longer period of time remove the battery.

Enjoy your chess games with your new GARDÉ chess clock.  
Your SchachQueen Team

